


DULConneX & DACb (WiFi)

1





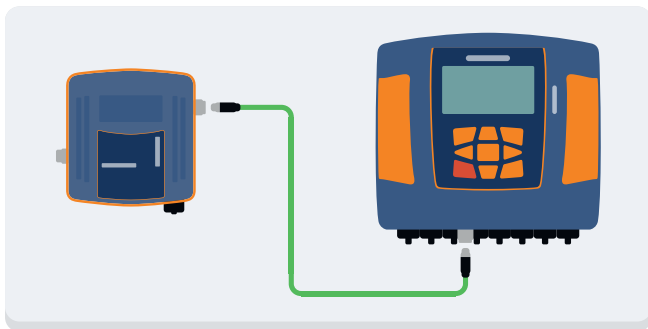

Connection

Connect the **DULCOMETER® diaLog DACb** to the **DULConneX** using the provided **M12 Ethernet Cable**.



Checklist


Please make sure you have the following items:

- DULConneX gateway 
- DULConneX access code 
- DULCOMETER® diaLog DACb 
- M12 Ethernet Cable 
- WiFi Connection 
- Smartphone, Tablet or PC 


2

Setup DACb

1. Start the **DULCOMETER® diaLog DACb** by connecting the power supply.

- 2.
- Press the **Menu** key on the device
 - Navigate to **Setup** using the arrow keys 
 - Navigate to **Bus Configuration**
 - Make sure the **IP address** is set to **192.168.001.201**


If it's not, please use the arrow keys to enter the above IP address.

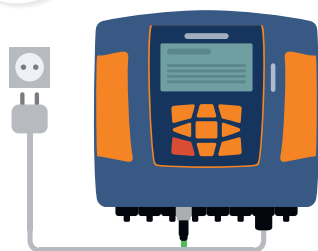

3

Setup DULConneX

1. Start the **DULConneX**

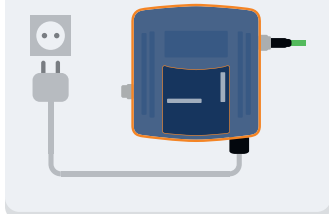

Start the **DULConneX** by connecting the power supply.

2. Connect to WiFi Network "DULConnect"



On your Mobile / Tablet / PC, connect to a WiFi Network with
 Name / SSID: **DULConnect**
 Password: **FD1960de01**

3. Connect the **DULConneX** to the Internet



Open your web browser and type in following address:
192.168.42.101

Enter **Name / SSID & Password** of the WiFi network you want the DULConneX to be connected to.

Note: Spaces are not allowed in WiFi Name / SSID

Also make sure to choose the correct Region:

0 = Europe **1 = North America** **2 = Asia**

Press **Save** and wait for the DULConneX to reboot.


DULCOnneX & DACb (WiFi)

4 Sign Up

(You can skip this step if you are already registered)
Create an account on dulconnex.prominent.com/signup.html.



Enter the **access code** you received via mail.

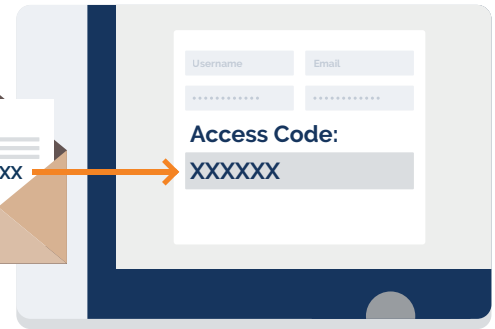

5 Add Device

Login to dulconnex.prominent.com, click on "Add device" and enter **Serial number & Identity code** of your **DULCOMETER® diaLog DACb**.



You can find the codes on the **device sticker** or via the device **Menu**



6 Done!

That's it!

You connected the **DULCOMETER® diaLog DACb** to the **DULCOnneX**.

Within a few minutes you can see the **data flowing**.



If "No Data" is shown even after waiting a while, power off both the DACb and the DULCOnneX and start again from step 