


# DULConneX & AEGIS II

## 1 Connection

Connect the **AEGIS II** to the **DULConneX Gateway** using the provided **M12 Ethernet cable**.

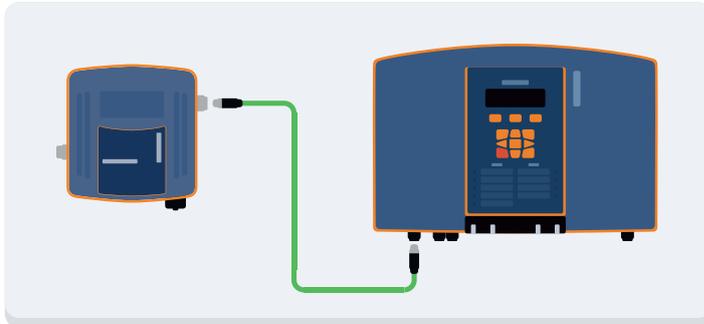

### Checklist

Please make sure you have the following items:

- DULConneX Gateway 
- DULConneX access code 
- AEGIS II 
- M12 Ethernet cable 
- WiFi connection 
- Smartphone, tablet or PC 

## 2 Setup AEGIS II



1. Start the **AEGIS II** by connecting the power supply.
2.
  - Press the **Menu** key on the device
  - Navigate to „**System**“ using the arrow keys 
  - Navigate to „**Communications**“
  - Make sure the „**LAN IP Address**“ is set to **192.168.001.201**

If it's not, please press **F1** and use the arrow keys to enter the above IP address.



## 3 Setup DULConneX Gateway

### 1. Start the DULConneX Gateway



Start the **DULConneX Gateway** by connecting the power cable.

### 2. Connect to WiFi "DULConneXgwXXXX"




On your Mobile / Tablet / PC, connect to a WiFi network with

Name / SSID: **DULConneXgwXXXX**  
Password: **FD1960de01**

(„XXXX“ are the last 4 digits of the serial number of your DULConneX Gateway)

### 3. Connect the DULConneX Gateway to the web

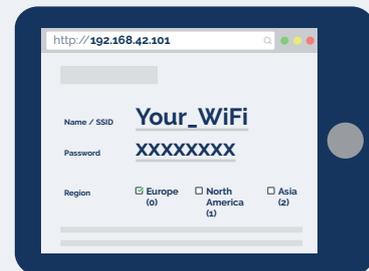

Open your web browser and type in following address:  
**192.168.42.101**

Enter **Name / SSID** & **Password** of the WiFi network you want the DULConneX Gateway to be connected to.

Also make sure to choose the correct region:  
**0 = Europe (default)**    **1 = North America**    **2 = Asia**

Press **Save** and wait for the DULConneX Gateway to reboot.

# DULConneX & AEGIS II

## 4


### Sign Up

*(You can skip this step if you are already registered)*

Create an account on [dulconnex.prominent.com/signup.html](https://dulconnex.prominent.com/signup.html).



Enter the **access code** you received via email.

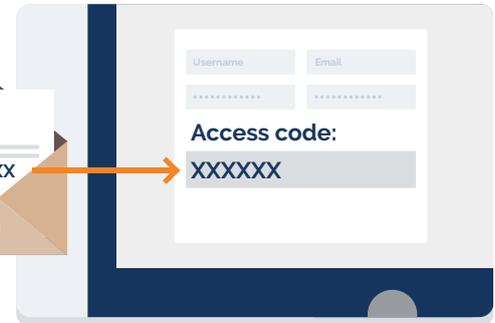

## 5


### Add device

Login to [dulconnex.prominent.com](https://dulconnex.prominent.com) and click on "Add device" and enter the **serial number** of your **AEGIS II**.



You can find the serial number on a **sticker** on the **device housing** or via the device's **Menu**

- ↓
- System
- ↓
- Diagnostic

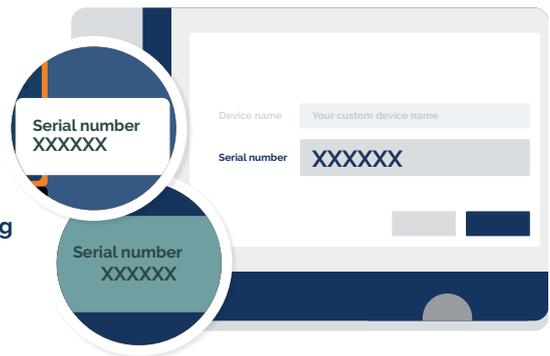

## 6

### Done!

That's it!

You connected the **AEGIS II** to the **DULConneX Platform**.

Within a few minutes you can see the **data flowing**.



If "No Data" is shown even after waiting a while, power off both devices and start again from step 